

Invicta™ Throttle Footrest (M) **&** **Invicta™ Throttle Footrest (L)**



ASET EK
SIM SPORTS™

Box content:


- Throttle Footrest
- Three (3) allen screws
- Installation guide (This document)

Note: Use the Allen key (3 mm) supplied with the Asetek SimSports™ Invicta™ Brake & Throttle

Step 1:


Notice: do not use a power drill, as this may damage the screws

Remove pedal face plate from the throttle pedal arm by unscrewing the screws using the allen key, supplied with the Asetek SimSports™ Invicta™ Brake & Throttle.

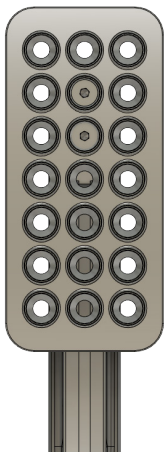

Step 2:


Align the footrest's holes with the pedal face plate's holes on the right side of the pedal face plate.

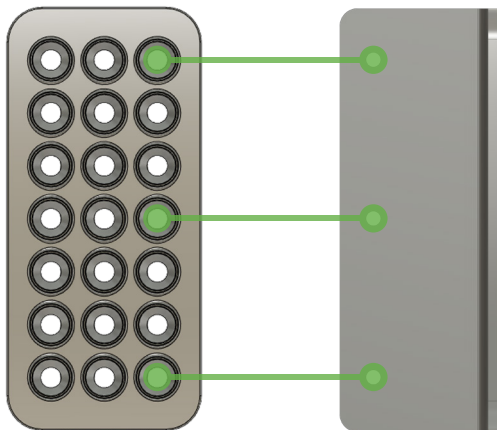

Note: The throttle footrest is intended to be used solely on the right side of the throttle pedal face plate

Step 3.


Insert and fasten the three allen screws with the allen key, to mount the throttle footrest to the pedal face plate

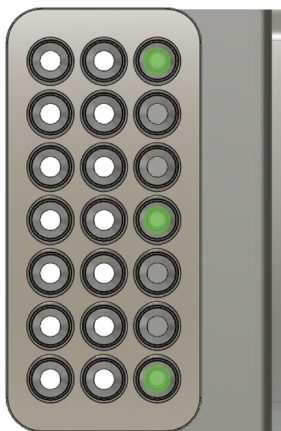

Note: The screws can bite hard, so be careful not to overtighten or have the tool slip. Recommended torque: 2nm

Step 4.

Align the pedal arm's holes with the pedal face plate's holes.

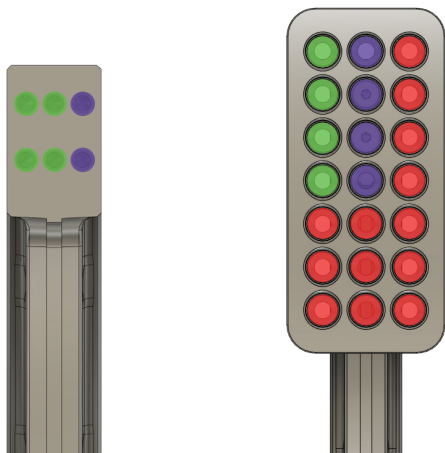

Note: When the throttle footrest is mounted to the throttle face plate, the face plate can only be mounted in the holes, matching the colors between the pedal face plate and the pedal arm.

Step 5:

Insert and fasten the screws with an allen key.

Start racing!

Note: The screws can bite hard, so be careful not to overtighten or have the tool slip.

Recommended torque: 2nm





A SETEK
SIM SPORTS™